




# 20K SuperLite Safety Chain Kit

## #2441

**NOTE:** In order to determine the total tow capacity of a system, you must *consider the weight ratings of each component* in that system. This includes, but may not be limited to, the capacity/rating of the tow vehicle, the fifth wheel hitch, and the hitch's mounting system. *Actual tow capacity of the system will be equal to the lowest rated component.*

1. Check the Parts List quantities below before you begin. Call (800) 443-2307 to report any shortage.
2. Set the Base Foot Spades {A} as seen below, onto the rear base rail.
3. Insert the Base Rail Release Pins {B} and Hitch Pin Clips {C} through the Base Rail and Base Foot Spades to secure in position.
4. Install your trailer's safety chains through the installed Base Foot Spades.

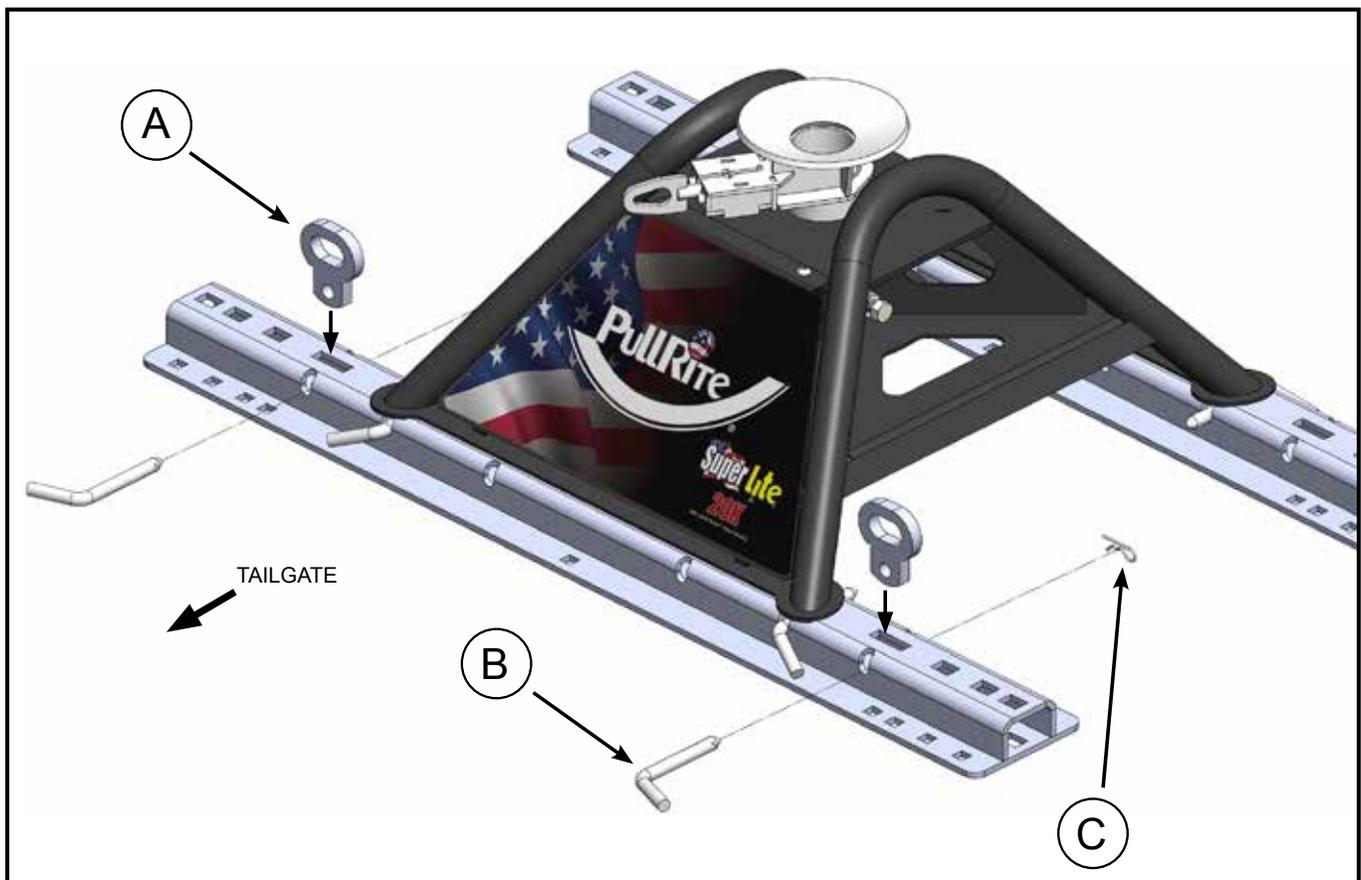

### PARTS LIST

Item	Description	Part No.	Qty.	Material
A	BASE FOOT SPADE	21100202	2	
B	BASE RAIL RELEASE PIN	08060001	2	
C	HITCH PIN CLIP	98410127	2	#3 13 ga. 1.63" zinc plated pin clip