





Quick Connect Capture Plates

MorRyde


(Part# 331707)

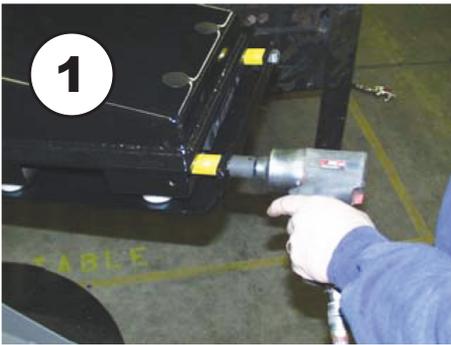

1. Remove the four 9/16-12" bolts with a 13/16 socket.

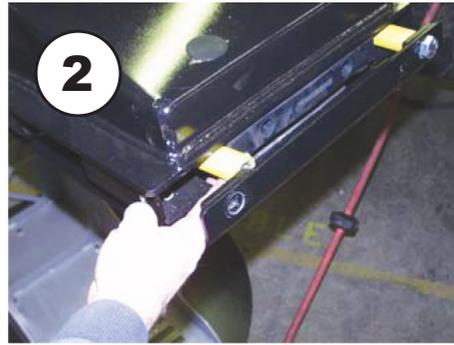


2. Push restraining rods toward center of box.

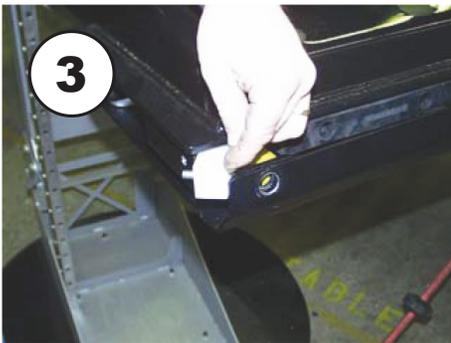


3. Slide spacer blocks into channel.



4. Install bolt through hole.

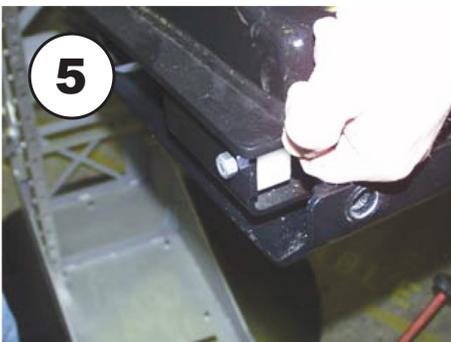


5. Install and tighten nut (self locker) x 4.

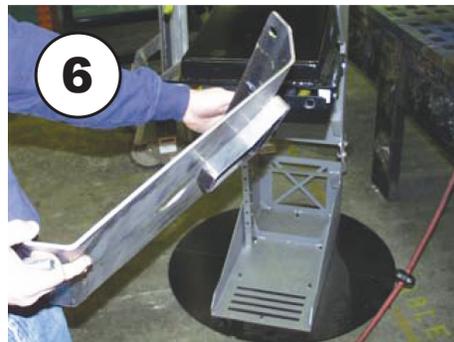


6. Slide PullRite skid pad (making sure wedge is to rear of box) into place.


(CONTINUED ON REVERSE)

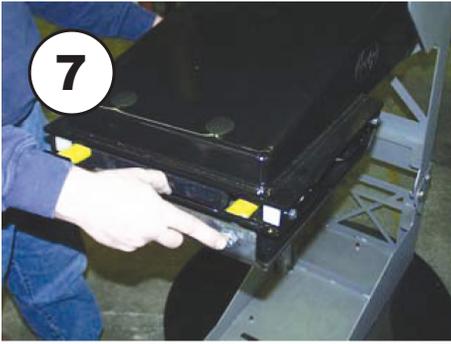

7. Put plate in location using two 9/16-12" bolts opposite corners to hold plate.

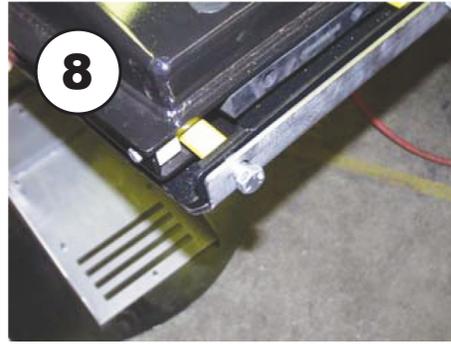


8. Align opposite corners to restraining rods.

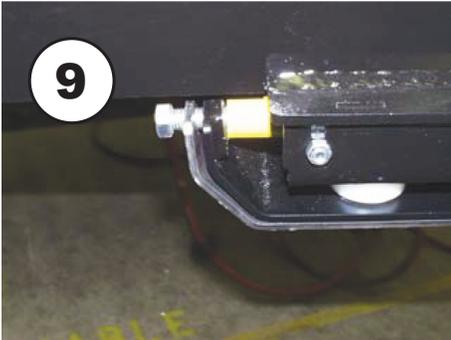

9. Align all 4 bolts before tightening.



10. Tighten all 4 bolts and torque to 85 ft. lbs.

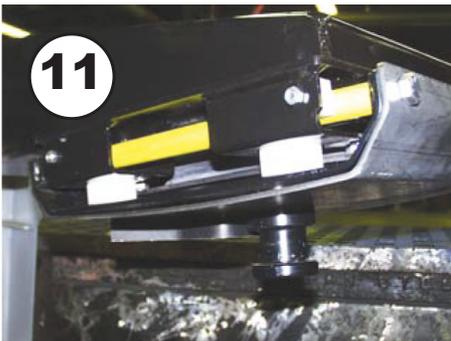

11. Completed installation

PARTS LIST

| Description | Part No. | Qty. | Material |
|----------------------------------|----------|------|--|
| STABILITY PAD FOR RETAINMENT ROD | 33170702 | 4 | |
| 5/8" HEX CAP SCREW | 98010244 | 4 | 5/8"-18 X 1" GRD 5 ZINC PLATED HEX CAP SCREW |
| 5/8" FLANGE NUT | 98150169 | 4 | 5/8"-18 STAINLESS STEEL SERRATED FLANGE NUT |